



## MODEL 401P & 411P SOLENOID VALVE

### SOLENOID VALVES, MODEL 401P AND 411P

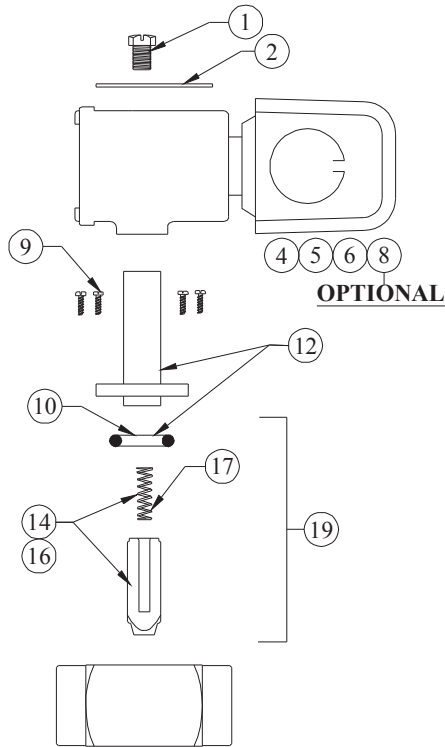

**MODEL 401P**

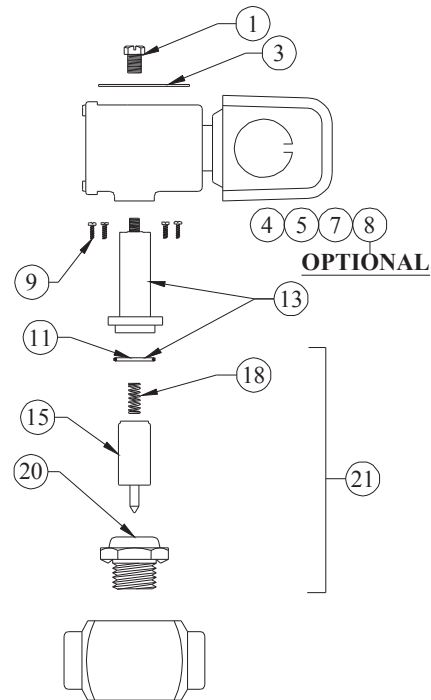

**MODEL 411P**

NO.	PART NO.	DESCRIPTION
1	41-14-1	Top Plug Screw
2	41-13-5	Nameplate
3	41-13-12	Nameplate (411P)
4	41-9-1-	Solenoid Coil (Specify Voltage) Junction Box As Shown
	41-9-2-	Solenoid Coil (Specify Voltage) Junction Box As Shown (411P)
5	41-9C-1-	Solenoid Coil (Specify Voltage) Conduit Connection
	41-9C-2-	Solenoid Coil (Specify Voltage) Conduit Connection (411P)
6	41-9D-1-	Din Coil (Specify Voltage)
7	41-9D-2-	Din Coil (Specify Voltage) (411P)
8	41-77-100110	(Optional) Din Female Connector
9	41-16-1	Enclosing Tube Screw (4 Req'd)
10	41-5-8	O-Ring, Buna-N (1/2 X 5/8 X 1/16)

NO.	PART NO.	DESCRIPTION
11	24-3	O-Ring, Buna-N (13/16 X 15/16 X 1/16)
12	41-7-1	Enclosing Tube & O-Ring
13	41-7-6	Enclosing Tube & O-Ring (411P)
14	41-2-1	Standard 401 Plunger With Buna-N Disc (Including Spring)
15	41-10-1	Plunger (411P)
16	41-2-10	(Optional) Plunger With Teflon Disc (Model 401PT)
16	41-2-13	(Optional) Plunger With Viton Disc (Model 401PV)
17	41-1-1	Plunger Spring
18	41-1-3	Plunger Spring (411P)
19	41-24	Repair Kit (401P)
20	41-21-1	Valve Seat
21	41-25	Repair Kit (411P)